 
 


Light Fixture Installation

Tools Required:




Adjustable Wrench

Philips Screwdriver

Before Installation


1. Please read these instructions before assembling or installing the product. **NOTE:** Installation by a licensed electrician is recommended.
2. Take out the fixture and the mounting package and make sure all parts are included. If any part is missing or damaged, please contact us.
3. All parts must be used as indicated in these instructions. Do not substitute any parts, leave parts out, or use any parts that are worn out or broken.
4. Do not disassemble the main body, as it has been installed & commissioned correctly & precisely before leaving the factory.
5. **IMPORTANT:** Turn off the main power at the circuit breaker and place the wall switch or pull chain in the "OFF" position.
6. Do not use bulbs with wattage greater than specified on this fixture.

Parts List

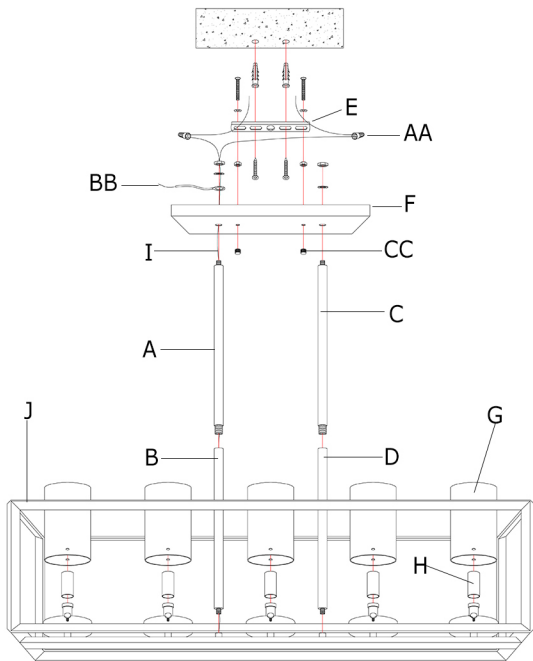


Part	Name	Quantity
A	centre tube A	1
B	centre tube B	1
C	centre tube C	1
D	centre tube D	1
E	mounting strap	1
F	canopy	1
G	glass shade	5
H	sleeve	5
I	main wire	1
J	metal frame	1
AA	wire connector	2
BB	ground wire	1
CC	cap nut	2


Installation Guide

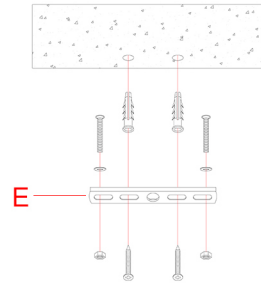


1. Shut off power before installation. Fix the mounting strap (E) to the ceiling.

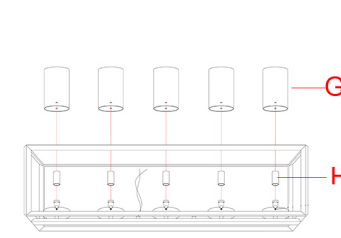


2. Put on the sleeves (H) and screw in light bulbs (not included with the light fixture). Rest the glass shade (G) in place and secure with the screws (DD).

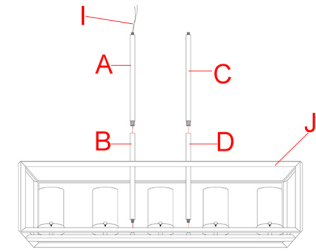


3. Feed the main wire (I) through centre tube (A, B). Screw the centre tube B into the metal frame (J) and thread the centre tube A into the centre tube B. Repeat to install centre tubes (C, D).

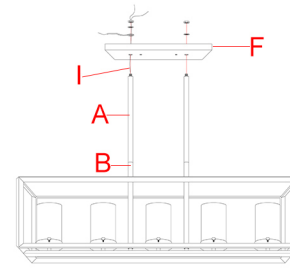

4. Insert the centre tube A and centre tube B assembly with main wire (I) through the canopy (F) and fix with washer and nut.

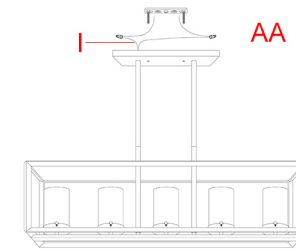

5. Connect the main wire (I) with wire connectors (AA) to the corresponding wires in ceiling.

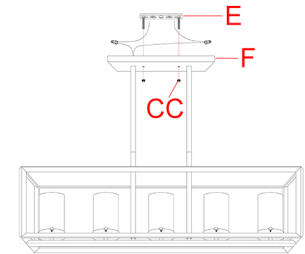

6. Attach the canopy (F) to the mounting strap (E) and fix with cap nuts (CC). Turn on the power and test.

Troubleshooting

Problem	Possible Cause	Corrective Action
Fixture does not light.	<ol style="list-style-type: none"> 1. Fixture may be wired incorrectly. 2. Worn or broken bulb. 3. Lamp socket or LED transformer (if applicable) may go bad. 	<ol style="list-style-type: none"> 1. Check wiring. 2. Replace bulb. 3. Replace lamp socket or LED transformer (if applicable).
Light bulb flickers.	<ol style="list-style-type: none"> 1. Switch Contacts are bad. 2. Wire connections are loose. 3. Light bulb socket may go bad. 	<ol style="list-style-type: none"> 1. Replace the switch. 2. Check wire connections. 3. Replace the socket.