
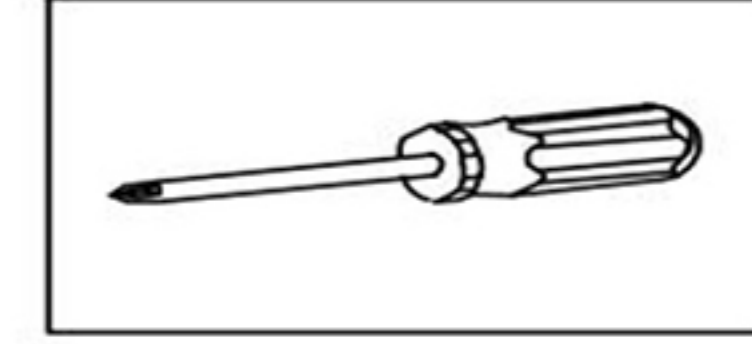


# Light Fixture Installation

## Tools Required:

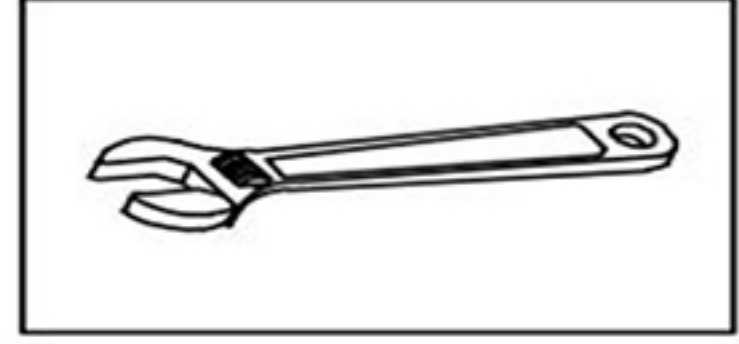


Adjustable Wrench

Philips Screwdriver

## Before Installation


1. Please read these instructions before assembling or installing the product. **NOTE:** Installation by a licensed electrician is recommended.
2. Take out the fixture and the mounting package and make sure all parts are included. If any part is missing or damaged, please contact us.
3. All parts must be used as indicated in these instructions. Do not substitute any parts, leave parts out, or use any parts that are worn out or broken.
4. Do not disassemble the main body, as it has been installed & commissioned correctly & precisely before leaving the factory.
5. **IMPORTANT:** Turn off the main power at the circuit breaker and place the wall switch or pull chain in the "OFF" position.
6. Do not use bulbs with wattage greater than specified on this fixture.

## Parts List

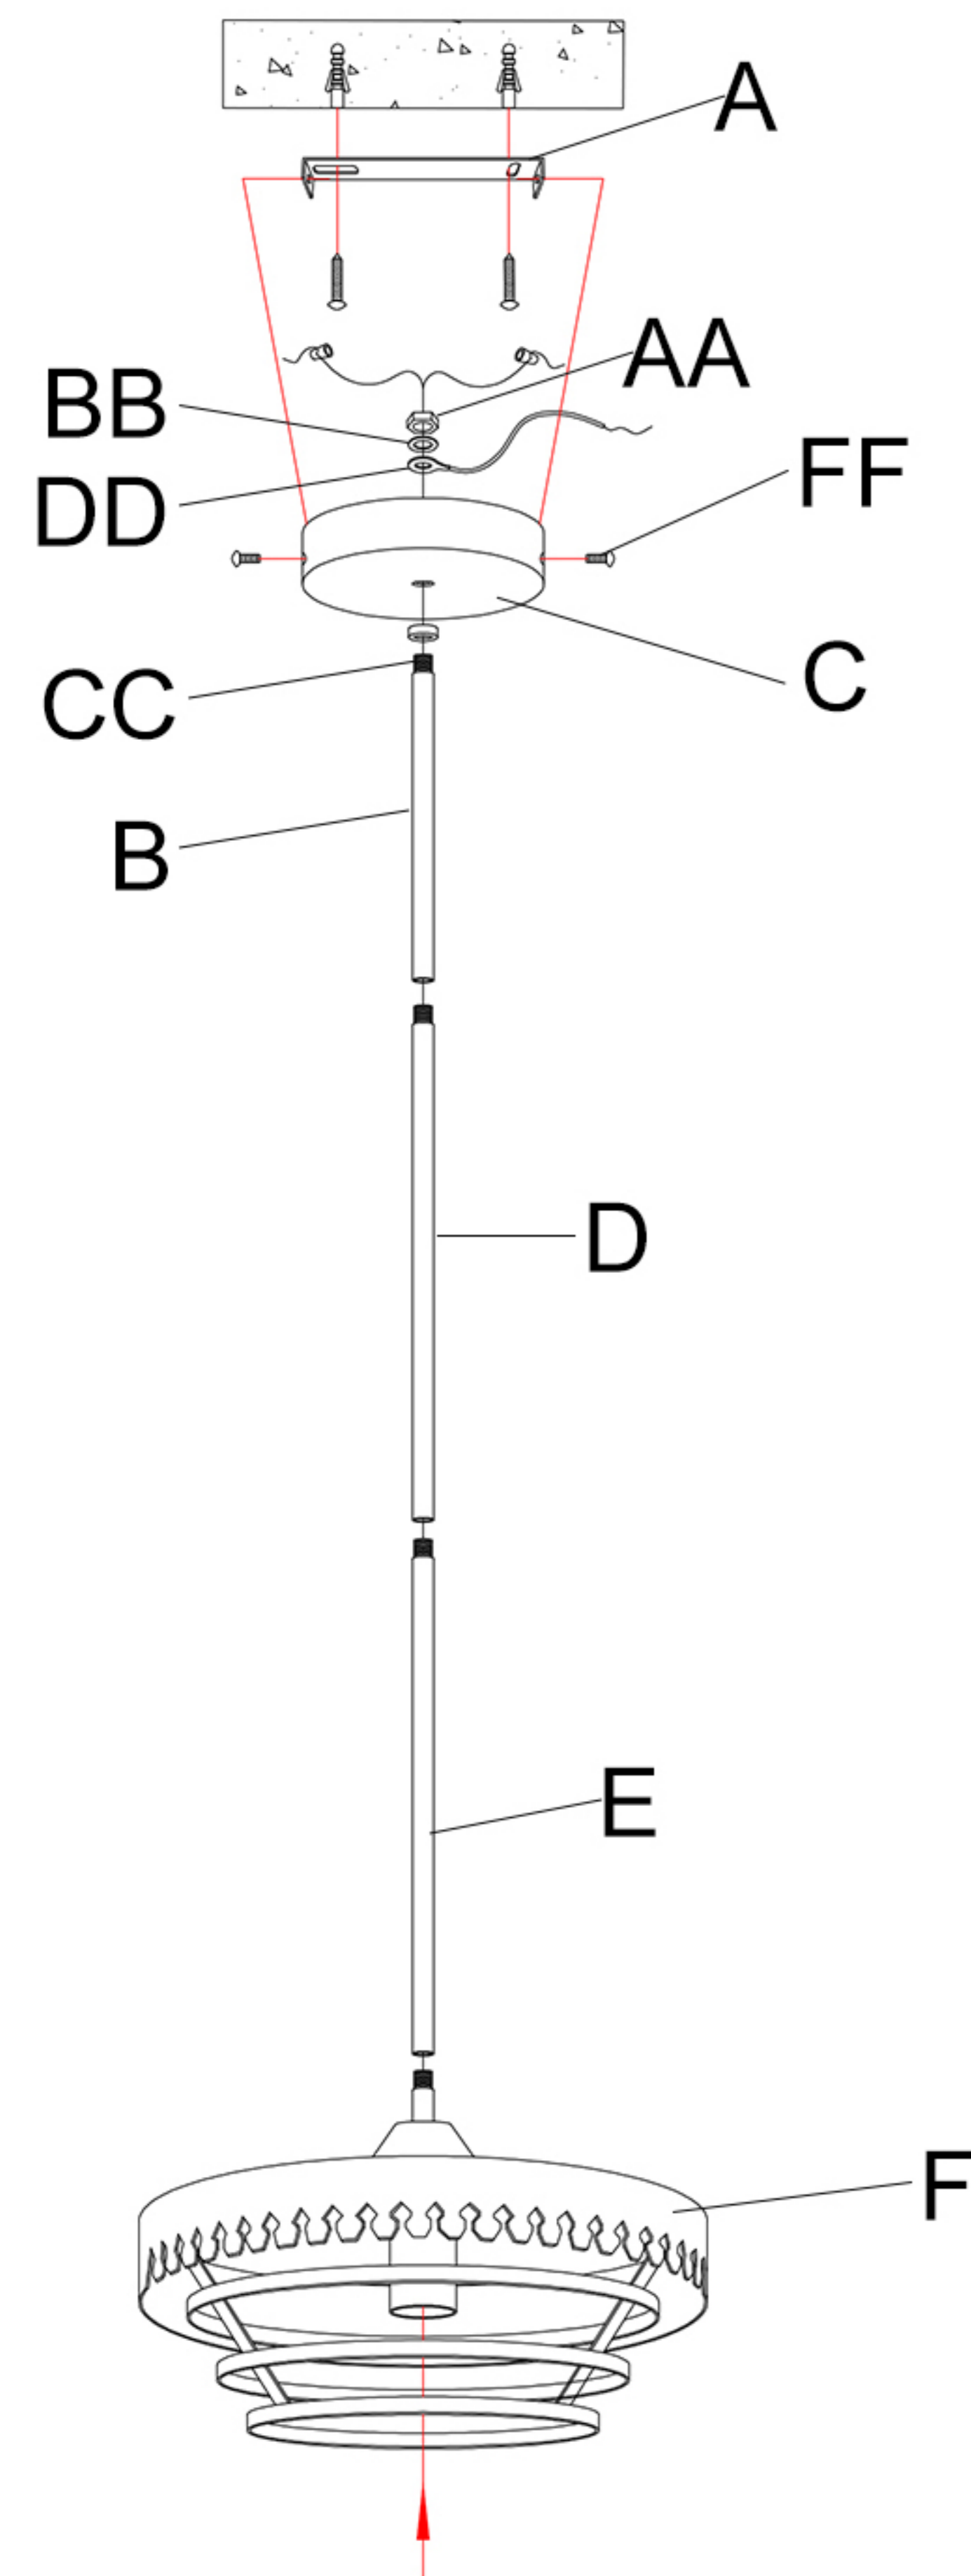

Part	Name	Quantity
A	mounting strap	1
B	short center tube	1
C	canopy	1
D	long center tube A	1
E	long center tube B	1
F	metal frame	1
AA	nut	1
BB	washer	1
CC	threaded pipe	1
DD	ground wire	1
EE	cap nut	2
FF	screws	2

## Installation Guide

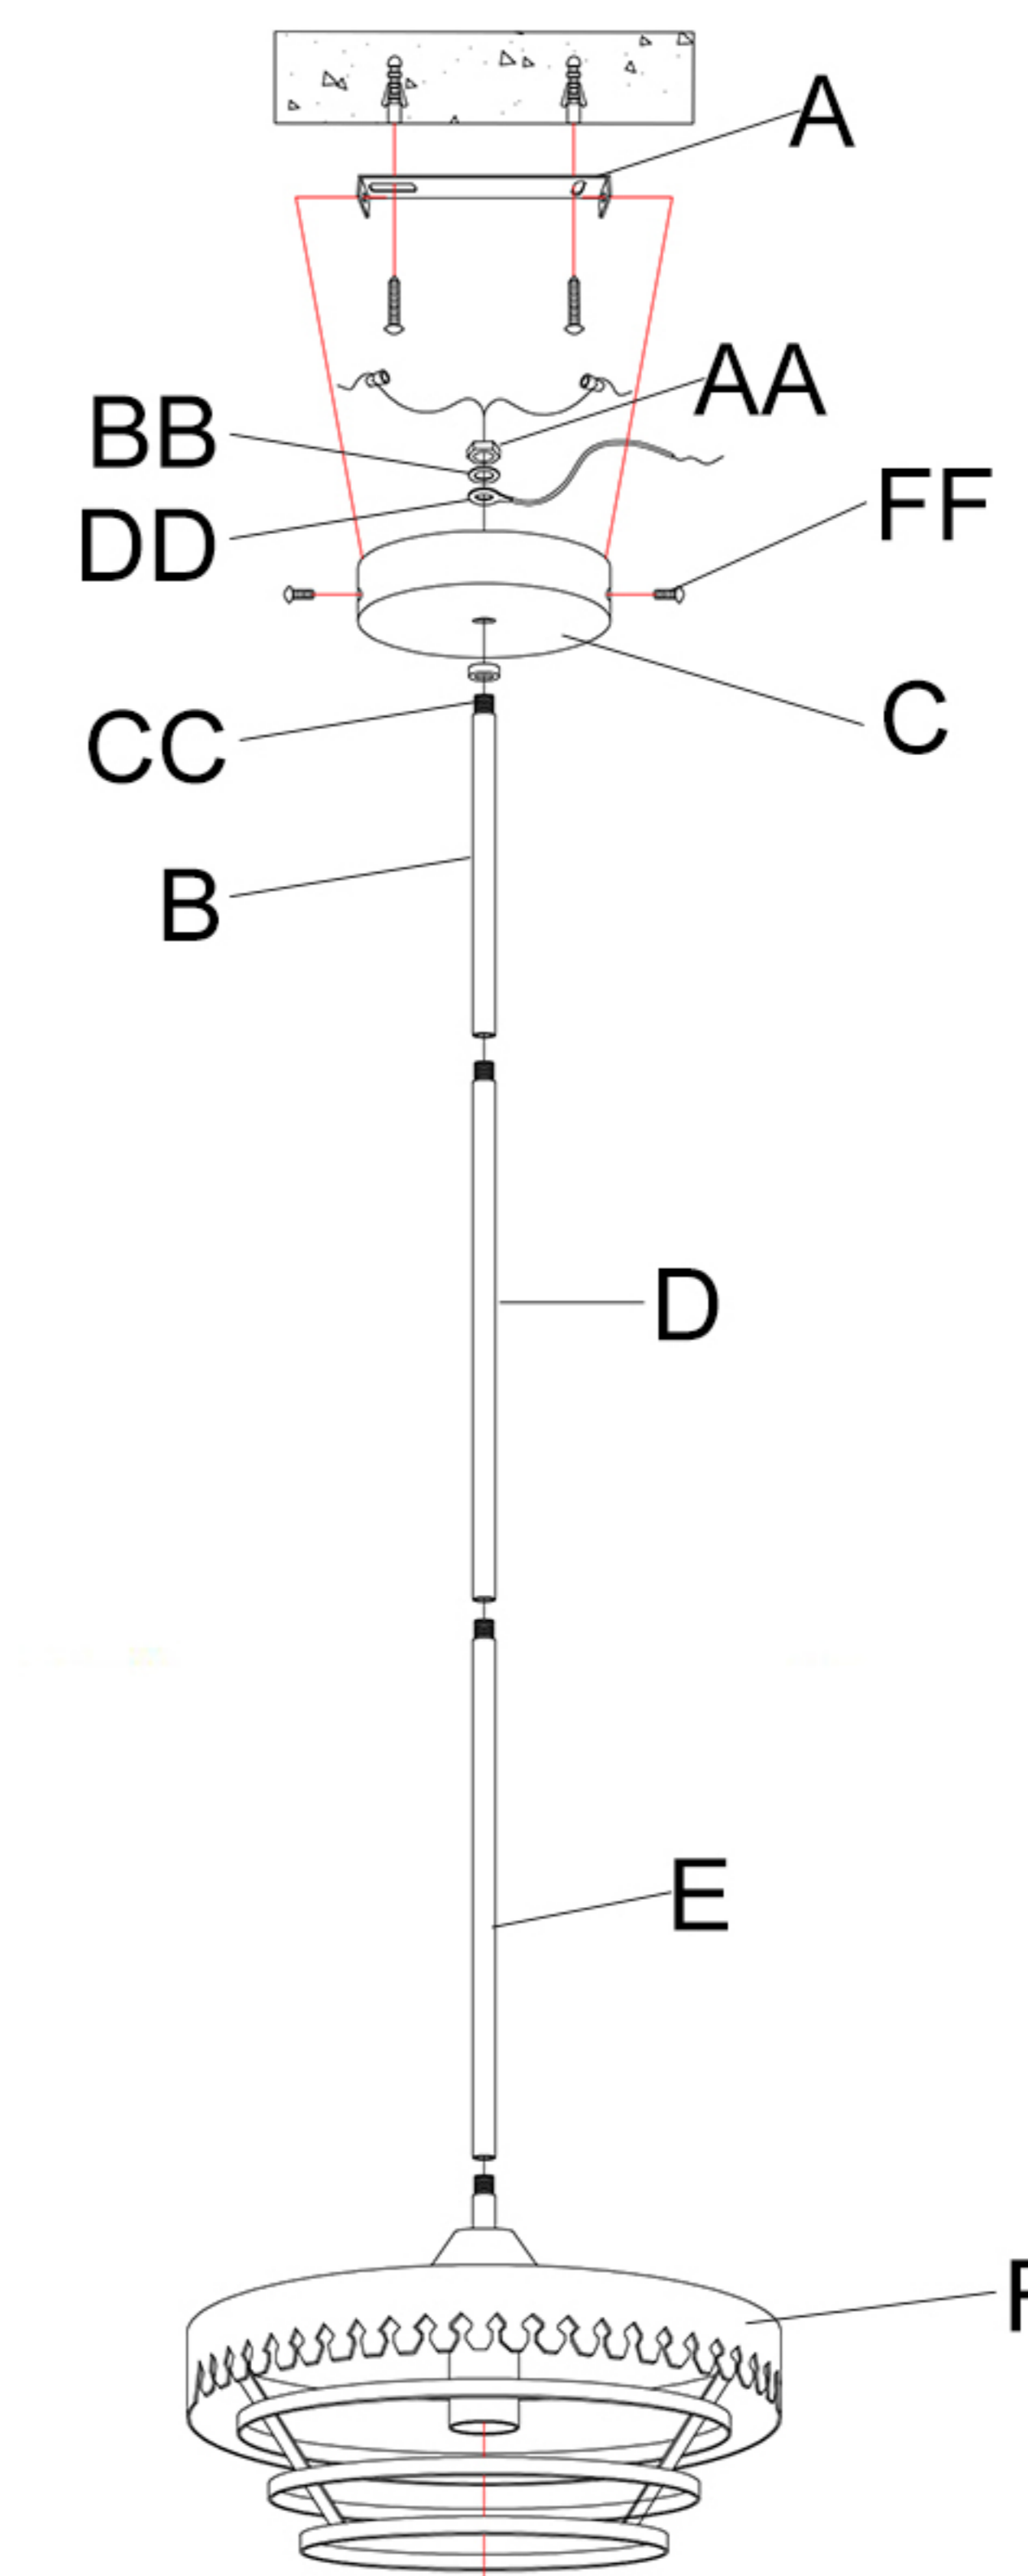

1. Shut off power before installation.
2. Fix the mounting strap (A) to ceiling with screws (FF).
3. Remove the nut (AA) and washer (BB) from the threaded pipe (CC) of the short center tube (B), and then screw the threaded pipe (CC) through the canopy (C). Screw back the ground wire (DD), washer (BB) and nut (AA).
4. Feed the main wire through long centre tubes (D, E). Screw the long centre tube B (D) into the metal frame (F) and thread the centre tube A (D) into the centre tube B (E). Then, thread the long center tubes (D,E) into the short center tube (B).
5. Connect wires with wire connectors to the corresponding wires in ceiling.
6. Attach the canopy (C) to the mounting strap (A) and fix with cap nuts (EE).
7. Install the light bulb (not included) and turn on the power and test.

## Troubleshooting

Problem	Possible Cause	Corrective Action
Fixture does not light.	<ol style="list-style-type: none"> <li>1. Fixture may be wired incorrectly.</li> <li>2. Worn or broken bulb.</li> <li>3. Lamp socket or LED transformer (if applicable) may go bad.</li> </ol>	<ol style="list-style-type: none"> <li>1. Check wiring.</li> <li>2. Replace bulb.</li> <li>3. Replace lamp socket or LED transformer (if applicable).</li> </ol>
Light bulb flickers.	<ol style="list-style-type: none"> <li>1. Switch Contacts are bad.</li> <li>2. Wire connections are loose.</li> <li>3. Light bulb socket may go bad.</li> </ol>	<ol style="list-style-type: none"> <li>1. Replace the switch.</li> <li>2. Check wire connections.</li> <li>3. Replace the socket.</li> </ol>