

# Contents

# Instructions before Use

Safety Precautions	01
Precautions for Use	05
Parts Name	07

# Installation Guide

Pnstallation Steps	
Connection and Installation of Water Pipes10	
Install the Rumor Controller 12	
Trial Line	
Install the Rumor Controller	

Thank you for purchasing our products. Please read this manual carefully and use it correctly. After reading the manual, please keep it in a convenient place.

There are differences in the product shapes of various models. Please refer to the actual product for the product shape. The product shape in this manual is for reference only.

# Instructions

Description of Side Control Panel14
LED Display Description14
Remote Control Instructions
Instructions
Advanced Features

# Appendix

Replacing the Remote Control Batteries
Replace Backup Battery 19
Terms and Conditions20
Problem Judgment and Elimination21
Daily Maintenance
product Specification
Packing List

# Safety Precautions

Please read this safety precaution carefully before using it correctly. The precautions listed here are important contents related to safety, please be sure to follow them.



# 🛕 Warn



Do not splash water or detergent on the product body or the power plug • It may cause fire or electric shock

It may cause toilet breakage, damage or water seepage in the room.

This product is an electrical product, so please do not install it in a place where it is easy to be splashed by water or where the humidity is high. When using it in the bathroom, please install a ventilation fan or a ventilation port to maintain good air circulation in the bathroom.

It may cause fire or electric shock.

Set the socket for power wiring as follows

·If you do not wire according to the following requirements, it may cause fire or electric shock.

 a. The circuit of the socket should be protected by a high-sensitivity and fast leakage switch (rated induction current below 10mA) or an insulating transformer (above 1.5KVA and below 3KVA).

b. The installation position of the socket must be more than 0.3m away from the ground, and as far away from the bathtub as possible

The grounding wire of the product must be grounded, and must be connected to the grounding wire

·If not grounded, it may cause electric shock.

Note: The grounding treatment mentioned here means that the grounding resistance is below the 4Q protective grounding, and the grounding wire uses a steel wire with a diameter of 1.6mm or more

When using in the bathroom

Please confirm that the power plug has been waterproofed with silicone

· If it is not waterproofed, it may cause fire or electric shock.

# 🔥 Warn



Do not install this product in wet places such as bathrooms • It may cause fire or electric shock



prohibit

Never disassemble, repair, or modify the product without permission. It may cause fire or electric shock No wet hands

Do not continue to use the product when it fails. When the following situations occur, please pull out the power plug, close the water inlet angle valve, and stop the water

Trouble content: Cracks

and cracks in the piping

sound from the product.

abnormal smell, smoke from the product.

· If you continue to use it in a faulty

condition, it may cause problems such as

fire, electric shock or indoor water seepage


and main body, abnormal



Do not damage the power cord or toilet seat connection cord

It may cause electric shock.

Do not plug or unplug the power plug

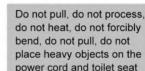

connection line

with wet hands

 Continuing to use regardless of product damage may cause fire, electric shock, short circuit

Do not use multiple wire outlets

prohibit

prohibit

Do not use water sources other than tap water • May cause problems such as dermatitis

Do not use loose and unstable power outlets • It may cause fire or electric shock

🔥 Warn

Do not connect extension cables or prohibit use extension cables in the middle, as this will cause overheating, fire and electric shock.



Pay attention to prevent low temperature burns

If you sit on the toilet seat for a long time, please adjust the temperature of the toilet seat to normal temperature. When the following people use the heat-retaining toilet seat and the warm air to dry, please adjust the temperature of the toilet seat to the normal temperature position, and adjust the temperature adjustment button of the warm air to [Low]. Children and the elderly who cannot adjust the temperature to an appropriate level by themselves. People with limited mobility such as sick people and the disabled. Sleepy people who have taken sleep-inducing drugs (sleeping pills, cold medicine, etc.), heavy drinking, and excessive fatigue.





Do not let cigarettes and other fires get close to the product  $\cdot$  It may cause fire

Prohibition

Do not put your fingers or other objects into or block the warm air outlet. Do not block the warm air outlet with your hands. Do not cover the warm air outlet with clothes, etc.

It may cause burns, electric shock, or burns.
Please be careful when using it by children and the elderly



Please do not apply strong force or impact, do not stand on the toilet seat, toilet cover or body, and do not place heavy objects • The product may crack, the body may fall apart, and people may be injured.

· Damage of the toilet can lead to flooding in the room.

For maintenance, please use diluted kitchen detergent (neutral), do not use the following products  $% \left( {{\left[ {{{\rm{c}}} \right]}_{{\rm{c}}}}_{{\rm{c}}}} \right)$ 

(Toilet detergent, household detergent, gasoline, banana water, decontamination powder, nylon brush, etc.)

The plastic may be damaged, deformed and cracked, resulting in personal injury.



Prohibition

When the water inlet angle valve is opened, the water inlet filter and the water discharge cock attached to the water inlet filter cannot be removed. • It may cause water leakage.



other than urine, urine and toilet paper • Otherwise, the toilet may be

Do not use the toilet to flush things



blocked and sewage may overflow. When not in use for a long time, please pull out the power plug

For safety reasons, please
 unplug the power plug.
 When used again, spoiled water
may cause dermatitis.



When installing the water inlet filter, please tighten it firmly • Otherwise it may cause water leakage



Do not twist or damage the water

It may cause water leakage

inlet hose

Prohibition

In case of water leakage, please close the water inlet angle valve to stop the water inlet

Must be obeyed Must be obeyed



# Plug in the power cord

Before use, please make sure the plug of the power cord is plugged in. The plug and the socket are tightly fitted and there must be no loose or incomplete insertion, otherwise it will cause accidental fire due to heat. When you do not use this product for a long time, please unplug the power plug.




When the toilet is clogged, please pull out the power plug and use a commercially available pipe cleaner to remove the clog


Must be obeyed If the power plug is not pulled out, when the equipment performs automatic cleaning, it may cause sewage overflow and indoor flooding




Do not expose this product to direct sunlight Discoloration, aging, deformation and damage to the product

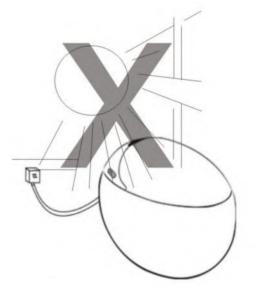

# Precautions for use

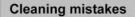

Do not wipe the product body with hard and rough.

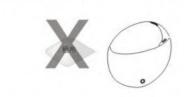



# **Daily maintenance**



During thunderstorms, pull out the power plug. 0

# Do not lean back on the seat cover


· May cause damage to the case


When placing an auxiliary seat for infants on the seat, please take it away after use

0


· Some functions may not be available.

# Precautions for use

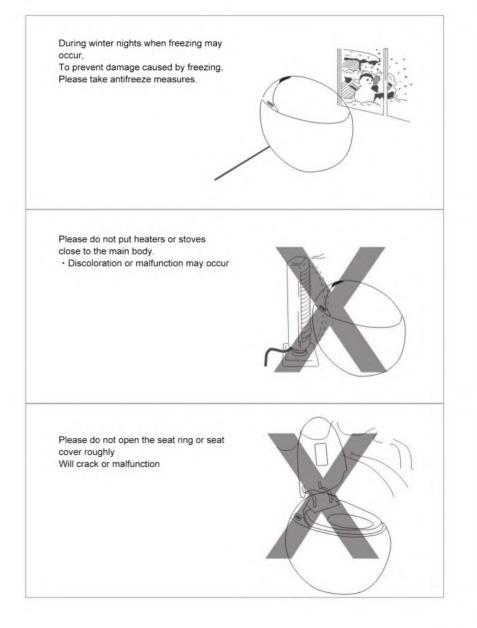


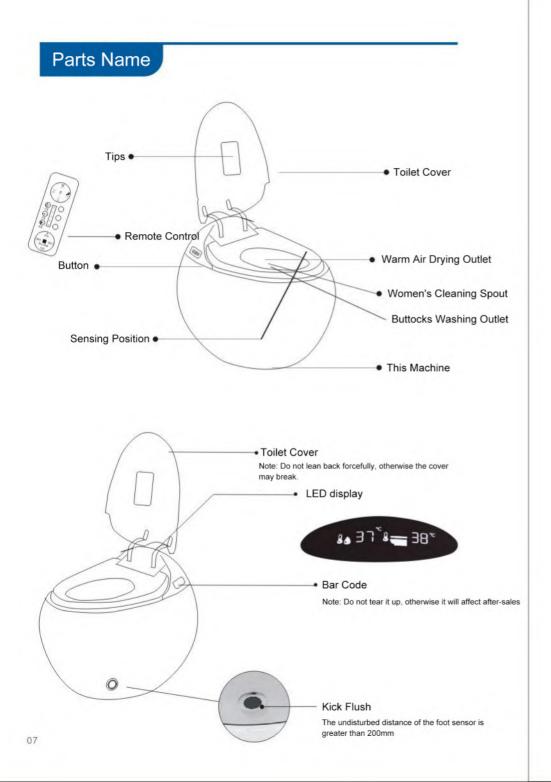

# The Main Function

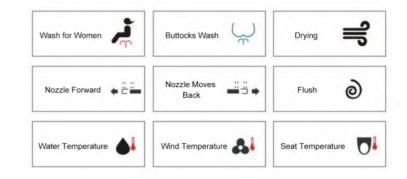

**Humanized Function** 

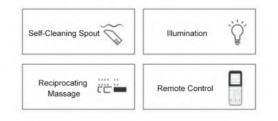


# Safety




08

# Installation Guide

# **Required Tools**

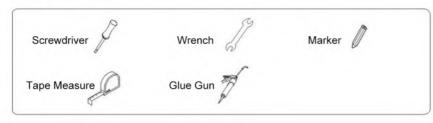

# Installation Diagram

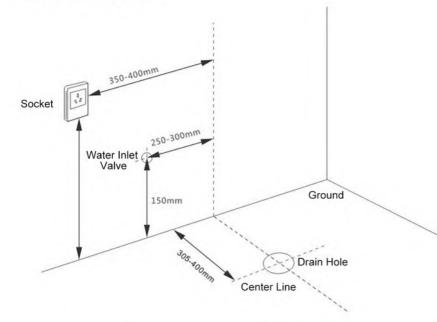




Please set the power socket according to the following regulations 1. Confirm that the power plug used is properly grounded, 2. The length of the electro-hydraulic line is 1.5m, and the power socket should be close to facilitate the installation and disassembly of this product, and it should be as far away from the bathtub as possible 3. It is recommended to use a waterproof socket, do not use an extension cord to connect the product.

· Otherwise it may cause fire, electric shock

# **Product Dimensions**

# unit:

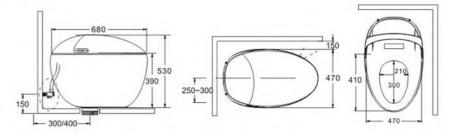

# **Before Installation**

Water pressure test: The water output within 15 seconds is greater than 1.32 gallons. Before installation, the water pipe should be boiled for 2 minutes before being connected to the water inlet. The police can be installed.



# **Installation Steps**

Mark the center line of the drain outlet on the ground. According to the size of the toilet, install the water inlet angle valve at a suitable position on the wall


Install the water inlet angle valve (as shown in Figure 1)

Construction and installation instructions (as shown in Figure 2, Figure 3, and Figure 4)


AAlign the wall to the center line of the drainpipe (there are two options for the pit distance of 305mm and 400mm). B depicts the position of the center hole (select the mounting hole according to actual needs).


C Gently turn the toilet sideways, and press the oily side of the sealing ring of the accessories to the sewage outlet at the bottom of the toilet


D Align the drain outlet of the toilet to the vertical position of the drain outlet.

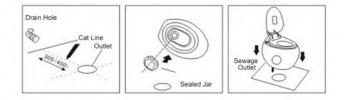

# Install the Toilet

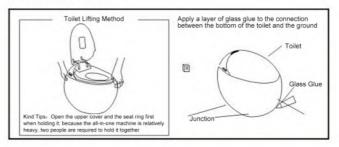

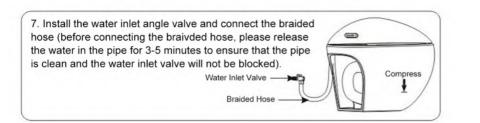

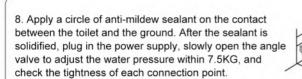



 The smart toilet accessories have been debugged before leaving the factory, and unauthorized disassembly and assembly are strictly prohibited. Please use the fittings and tubes provided by our company. Old fittings and tubes cannot be reused. If you have any questions, please contact your local dealer or our after-sales service department.

Warnings 2. All contents of this instruction manual are based on the latest situation of the product at the time of printing, and the company reserves the right to change without further notice.

# Water pipe connection and installation

 Install the new angle valve, connect one end of the braided hose to the angle valve, and connect the other end to the filter shell
 After plugging in the power supply, adjust the angle valve to control the water pressure within <7.5kg</li>

# Remove the old angle valve and replace it with the original angle valve Water Inlet Valve Compress Did Angle Valve Note: The hose cannot be folded, otherwise the water pressure will be too low to use the machine equipment. Did Angle Valve New Angle Valve

Note: This product adopts the super-swirl siphon jet flushing technology. If the water pressure is high (over 3 kg water pressure), there will be a little splashing water and excessive jet noise when the ceramic inner wall is super-swim flushing. You can slowly adjust the angle valve to the right. , the water pressure is reduced so that the flushing can work normally.



# Notice

 If there is a power failure during the cleaning process, please close the angle valve, and the function will return to normal after stopping the water supply and electricity.
 For installation, use the new hose assembly and other specified parts attached to the appliance. The old hose assembly cannot be reused, otherwise it may cause water leakage.



**Close Angle Valve** 

# Install the remote

# Installation Method



1. Clean the installation position before pasting. Press the tape firmly and evenly when applying. Use it after 15 minutes.

2. The double-sided adhesive is suitable for tile-type flat walls, not for wallpaper-type walls.

# **Trial Line**

Water and electricity for the first time:

After the water supply angle valve is turned on and the power is turned on, the soft light and the water temperature on the display screen will flicker, which means that the heating water tank is entering water. Wait for about 30 seconds for the soft light and the water temperature on the display to stop flashing, which means that the heating water tank is full of water. At this time, follow the steps below for trial operation

### 1. Human Sitting Sensor

The area shown in the figure is the half-fall sensing area of the human body. The system function can only be activated when the system senses that someone is sitting down. When the system senses that someone is sitting, the buzzer sounds once to indicate that it has been sensed, and the system function can be started. When the human body leaves the system sensing position, the buzzer beeps.

### 2. Check the Basic Functions

When the human sitting sensor is on, the buzzer beeps"DI" Press the "Police/Massage" or "Female/Massage" function on the shortcut panel

That is, the corresponding function can be activated. When testing, pay attention to the nozzle water will be sprayed out, pay attention to block

### 3. Check the Drying Function

When the human sitting sensor is on and the buzzer "beeps", press the "warm air drying" function on the shortcut panel to start the corresponding function.

# Sensor Sitting Induction Zone



# Description of Side Control Panel



h Buttocks Wash Wash for Drying Stop Women Stop Long press the stop button on the side to enter the switching off/on, and short press for the "stop" command, which is used to stop some work before repairing.



women's washing, press this button to start the women's washing, press this button again to switch to mobile washing, and so on. Press the stop key to end. The function can also be exited after the personnel leave the seat map.

When press function drying

When someone is seated on the seat ring, press this button to start the warm air drying function, and press the stop button to end the drying.

Press this button to automatically flush the ceramic once, and only the side flush is available when the machine is turned off.

function of the spray boom.

When seated, press this button to start butt cleaning, press this button again to switch to

mobile cleaning, and so on. Press the stop key to end. After the personnel leave the seat map,

they can also exit the function of cleaning the

intelligence department. When there is no seat, press this button to activate the self-cleaning

# LED Display Description



(Smart Toilet Top LED Display)



Indicates the temperature in degrees Celsius of the water sprayed from the rinse rod

Buttocks Wash


.....


Toilet Flush



Indicates the seat temperature in degrees Celsius of the seat ring

# Install the remote

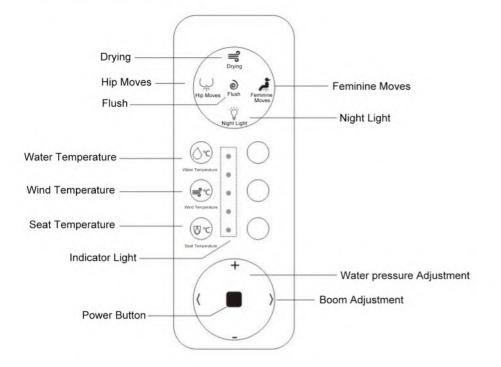

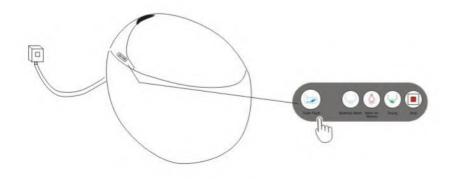

# Instructions for Use

Note: When using for the first time, if the remote control does not respond, you need to pair the code. (Operation method: press and hold the flush button on the side, hear three beeps from the smart toilet, then press any button on the remote control, and the smart toilet will beep once again, and the code matching is completed. After the code pairing time exceeds eight seconds , the smart toilet will beep twice to indicate code pairing failure.)

# Hip/Move

After the human body is seated and sensed, press the side button "buttock washing" or press the remote control "hip washing" button, the buttock washing nozzle will spray at a fixed position for two minutes and fifty seconds and then automatically stop spraying, or press the remote control "stop button Stop the operation, or press the "Stop" button on the side to stop cleaning. After the buttock cleaning function is started, press the buttock cleaning button again, and the nozzle will move back and forth to enhance the cleaning effect. If you press the nozzle again, it will stop back and forth Move and stay in the working state before moving. After the buttocks, moving and drying are started, press the "stop" button on the remote control.

# Female/Move

After the human body is seated, press the side button "female washing" or press the remote control "women washing" button, the female washing nozzle will spray at a fixed position for two minutes and fifty seconds and then automatically stop spraying, or press the remote control "stop button Stop the operation, or press the "Stop" button on the side to stop cleaning. After the feminine cleaning function is started, press the buttock cleaning button again, and the nozzle will move back and forth to enhance the cleaning effect. If you press the nozzle again, it will stop back and forth Move, stay in the working state before moving.

# Drying

After the human body is seated and sensed, press the "warm air drying" button on the side or the "drying" button on the remote control to enter the warm air drying, which will automatically stop after 3 minutes and 50 seconds. The "drying" button on the remote control is the air temperature adjustment button. Three-stage adjustment of air temperature and temperature: if the remote control is not on, the normal temperature is normal temperature.

# **Toilet Flush**

Press the "Toilet Flush/Flush" button on the side, or press the "Flush" button on the remote control, and the smart toilet will start the flushing function. If the AC power failure occurs, press and hold the "Toilet Flush/Flush" button for five seconds to execute the smart toilet flush function. At this time, the backup battery is used for power supply, so the state must ensure that the battery is charged before it can be operated. A 9V battery is used as a backup battery. The number of times of use is related to the battery capacity. The larger the capacity, the more times. The backup battery is only used for emergency when the AC power fails. It is not recommended to use this method all the time.

# Water Temperature

The "water temperature" key on the remote control is the water temperature adjustment key. Five-stage adjustment of water temperature: the remote control does not light up for normal temperature/digital display "---" for normal temperature: the remote control lights up with one digit for water temperature first level/digital display "31" the remote control lights for two digits for water temperature second level/digital display "33"; the remote control lights up three lights, the water temperature is three levels / digital display "35"; the remote control lights four lights four lights four lights, water temperature four levels / digital display "37"; the remote control lights five lights, water temperature five levels / digital display "37"; the remote control lights five lights, water temperature five levels / digital display "39".

# Seat Temperature

The "seat temperature" key on the remote control is the seat temperature adjustment key. Seat temperature five-stage adjustment: the remote control is not on for normal temperature/digital display "---" is normal temperature; Gear/digital display "34" remote control lights three lamp holder temperature third gear/digital display "36"; remote control lights four lamp holder temperature four gear/digital display "38"; remote control lights five lamp holder temperature five gear /Digital display "40".

# Night Light

The "night light" button on the remote control is the function key for operating the night light, which can turn on or off the light.

# Advanced Features



# Seat Flush Switch

Press and hold the remote control/side button and press the "Flush button" for 3 seconds to switch the "Flushing function from the seat"

# 


Soft Shutdown Long press the "stop button" on the side to switch on and off



**Notice** The drying and washing functions c annot be used in the sitting state

# Replacing the Remote Control Batteries


When the battery is exhausted, the remote control is sometimes insensitive, or out of control, at this time you should replace the alkaline battery

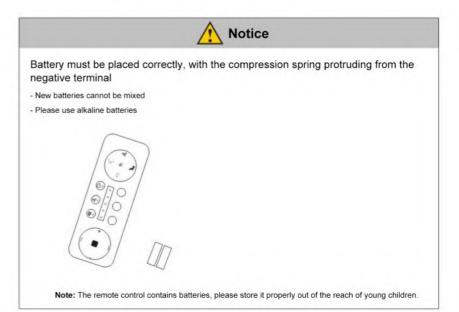


# Replace Backup Battery

# Step

1. Pull out the power plug	
2. Lift the toilet seat cover	
3. Take out the battery cover.	
4. Put the battery in the correct position	
5. Press the flush button to ensure normal flushing	
6. Put the lid back in place and secure the toilet lid	

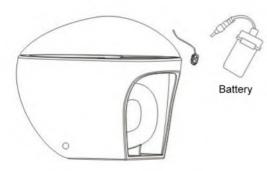

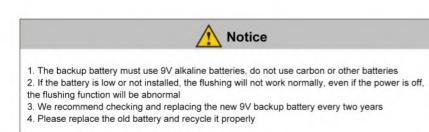

# Instructions for Use

# **Seating Sensor**

Because the seat sensor is installed, when there is no seat, even if the switch is pressed by mistake, the nozzle will not spray water, and the cleaning functions will not start.

Seating Sensor

Seating sensor If the following conditions occur, the sensor will not work.

※ The human body is not sitting on the seat ring



# Problem Judgment and Elimination

Troubleshooting and Troubleshooting				
Symptom	Check method	Countermeasure		
Does not start at all	Is there a power outage or the power outlet is not	Please make sure to insert the power plug		
	connected	Please unplug the power plug and plug it in again		
No water or poor water flow during flushing	Whether the water is cut off or the water supply is shut down	Please check the water flow and open the water supply valve		
	Whether the water supply filter is clogged	Please clean the filter		
	Whether the nozzle is blocked by scale	Please use a toothbrush to clean the nozzle		
water leakage	Whether the connection part of the water supply pipe is tightened	Please tighten the connection of the water supply pipe		
water temperature, sitting circle cool	Whether the water temperature and seat temperature are adjusted to normal temperature	Please readjust the temperature		

# Remote Troubleshooting Emergency Troubleshooting Operate the button on the toilet body to judge whether the flushing is normal and whether the trial operation is normal (start cleaning and drying after sitting) Put more than 2.1 gallons (8L) of water into the bucket to rinse the ceramic body without water supply. Note: Avoid water overflowing from the cavity. Button Image: Comparison of the toilet body to judge whether the flushing is normal (start cleaning and drying after sitting)

When the product is not used for a long time, especially in winter when no one is at home for a long time, please drain the water in the water tank and pipes to prevent freezing.

# Drain

1. Unplug and cut off the power

 Unscrew the hose connected to the angle valve to drain the water in the pipeline, and then reinstall the hose.
 Water in the ceramic body Add some antifreeze to the water in the ceramic body

Reminder: When using the toilet again, be sure to turn on the water supply angle valve and power supply.



# Daily maintenance

# Main body cleaning


1. The surface of the main body should be wiped with a sponge or a soft dry cloth or a cloth with a neutral lotion

2. Note: Do not use thinner, light gasoline, detergent, chemicals, etc. to wipe, and do not spray insecticides, fragrances, deodorants, etc.

Note: The material of the product is a new plastic material, which itself will not change color. Most of the discoloration phenomenon is due to oxidation reaction. The product is exposed to liquids such as perfume, toilet cleaner, and nail polish, and is not wiped off in time, resulting in oxidation of the product surface. A few users place seat pads on the seat ring. The seat ring has a heating function. The contact surface between the mat and the seat ring is generally non-slip rubber. Once heated, it is easy to discolor, and the position where the seat ring touches will change color.

# **Nozzle Cleaning Method**

1. Please clean the nozzles regularly: first prepare a toothbrush and a soft cloth. When no one is seated, press the side butt wash button without a seat, and the spray rod will extend to clean the nozzles and nozzles.

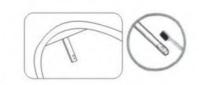


2. Use a toothbrush and a soft cloth for cleaning. After cleaning, press the stop button and the spray bar will automatically return.

# Water supply filter cleaning method

1. Turn off the angle valve switch, use a flat screwdriver

Unscrew the filter by turning to the left

 Take out the filter and clean it with a toothbrush before putting it into the angle valve
 Turn on the angle valve switch after tightening the filter

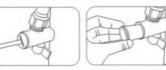

Unscrew the filter Rinse filter dirt with water

# **Technical Indicators**

Weter Comete	Way	Connect Directly to the Water Pipe
Water Supply	Dynamic Pressure	0.15Mpa-0.75Mpa(1.5kgfcmi-7.5kgfcm)
Cleaning Device	Rump Washing Water volume	0.5L/min-0.9L/min
	Washing Water Bolume for Women	0.5L/min-0.9L/min
	Heating Method	Instant
	Temperature Adjustment	Normal Temperature/1st Gear 31°C/2nd Gear 33°C/3rd Gear 35°C/4th Gear 37°C/5th Gear 39°C
	Heating Power	1600W
	Safety Devices	Temperature Switch/Thermal Fuse
Seat Heater	Temperature Adjustment	Normal Temperature/1st Gear 32°C/2nd Gear 34°C/3rd Gear 38°C/4th Gear 38°C/5th Gear 40°C
Seat Heater	Heating Power	50W
	Safety Devices	Resettable / Thermal Cutoff / Blown Fuse
Warm Air Drying Heating Device	Heating Power	Warm/low temperature about 45°C/medium temperature about 50C/high temperature about 55C
	Safety Devices	200W
	Temperature Adjustment	Resettable / thermal cutoff / blown fuse
Other Safe	ty Devices	Leakage Protector